



Архангельск (8182)63-90-72
Астана +7(7172)727-132
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: <http://dhollift.nt-rt.ru> || dnh@nt-rt.ru

DH-VO

Колонный подъемник

Технические характеристики



→ Column lift for trucks, trailers & semi-trailers

DH-VO... • 1000 - 4000 kg



Multi-deck column lift with lower beam

The DH-VO... are specially designed to load and unload vehicles with multiple or moving loading floors. All DH-VO... are equipped with a flat platform, offering a smooth and level ride from the various loading floors to the ground (and vice versa).

The DH-VO... have a **cylinder beam at or below the vehicle floor level**, so that the **passage height through the aperture of the vehicle body remains intact**. It is however not suitable for vehicles with a very low floor level.

Lower beam lifts are available in various models, and for different capacity classes. All exterior lifts are equipped with 2 tilt cylinders, hence the platform orientation is adjustable from the exterior controls. The most common lift models are:

DH-VO25.D2.A10 • 1000 - 2500 kg (old name = DH-VO4)

- Basic model, robust & heavy duty, multi-functional
- Compact cylinder beam = 360x237 mm (LxH)
- Platform = steel frame + aluminium infill profiles
- Lifting height to max. 2970 mm above the ground or 1150 mm under the roof level (1)
- Shrouds and platform seals on the outside (2)

DH-VO25.D2.B10 • 1000 - 2500 kg (old name = DH-VO3)

- Advanced model, allowing additional options (such as OVP404 = double manual toe-guards on the platform and the cylinder beam without electrical detection) and offering extra lifting height
- Larger cylinder beam = 480x237 mm (LxH)
- Platform = steel frame + aluminium infill profiles
- Lifting height to max. 3130 mm above the ground or 1150 mm under the roof level (1)
- Shrouds and platform seals on the outside of the columns (2)

Options: all DH-VO... offer a wide choice of options to adapt the lift to the specific requirement of each and every customer: safety rails on 2, 3 of 4 sides; roll-stops or hinged ramps; side loading ramps; foldable or slide-out ramps at the rear edge of the platform, etc...

(1) See remark 1 on pg. 165 reg. the achievable lifting height. If the platform lifts higher than 1150 mm under the roof, the roof needs to accommodate that the lift runners pass beyond the roof.

(2) Internal shrouds and seals possible with models ...C10 and ...D10.



Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Нижний Новгород (831)429-08-12	Смоленск (4812)29-41-54
Астана +7(7172)727-132	Калуга (4842)92-23-67	Новокузнецк (3843)20-46-81	Сочи (862)225-72-31
Белгород (4722)40-23-64	Кемерово (3842)65-04-62	Новосибирск (383)227-86-73	Ставрополь (8652)20-65-13
Брянск (4832)59-03-52	Киров (8332)68-02-04	Орел (4862)44-53-42	Тверь (4822)63-31-35
Владивосток (423)249-28-31	Краснодар (861)203-40-90	Оренбург (3532)37-68-04	Томск (3822)98-41-53
Волгоград (844)278-03-48	Красноярск (391)204-63-61	Пенза (8412)22-31-16	Тула (4872)74-02-29
Вологда (8172)26-41-59	Курск (4712)77-13-04	Пермь (342)205-81-47	Тюмень (3452)66-21-18
Воронеж (473)204-51-73	Липецк (4742)52-20-81	Ростов-на-Дону (863)308-18-15	Ульяновск (8422)24-23-59
Екатеринбург (343)384-55-89	Магнитогорск (3519)55-03-13	Рязань (4912)46-61-64	Уфа (347)229-48-12
Иваново (4932)77-34-06	Москва (495)268-04-70	Самара (846)206-03-16	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Мурманск (8152)59-64-93	Санкт-Петербург (812)309-46-40	Череповец (8202)49-02-64
Казань (843)206-01-48	Набережные Челны (8552)20-53-41	Саратов (845)249-38-78	Ярославль (4852)69-52-93

Единый адрес для всех регионов: <http://dhollift.nt-rt.ru> || dnh@nt-rt.ru